

Wiring Instructions

Non-Proportional Electric Brake Controller

BS3579



WIRING DIAGRAM



Setting the braking level

The adjustment dial should be set (according to trailer load) anywhere from 5% to 100%. This will apply the trailer brakes at the output setting in proportion to how aggressively the tow vehicle brakes are being applied.

* This method is preferred for vehicles 2012 onwards as on-board wiring systems can cause the brake controller to be ineffective

